

Lenovo erasure Google account SOP for S1La40

MBG WW Service Technical Support



Environment

NO.	Device	Qua.	Remark
1	Computer	1	CPU 1.7GHz or above, 512M ram or above, Windows XP or win7 system.
2	Driver	1	Huaqin Android Driver All-in-One.rar
3	Download Tool	1	hq_AL817_customdownload_V1.2_160120_SpecialImg
4	USB Cable	1	USB Cable



Preparation

- Unzip the user software.
- Create a new folder named "Rework-Secro" in the bottom of the user software.
- Copy the MT6753_Android_scatter file which in user software and the secro-sign.img file into the new "Rework-Secro" folder.
- Make sure that the device is power off.


Preparation: Driver Installation

Unzip the compression package:
Huaqin Android Driver All-in-One.rar

According to computer operating system bits, select to run **Huaqin Android Driver All-in-One 32 bit V1.00.exe** or **Huaqin Android Driver All-in-One 64 bit V1.00.exe**, the installation procedure as follows:

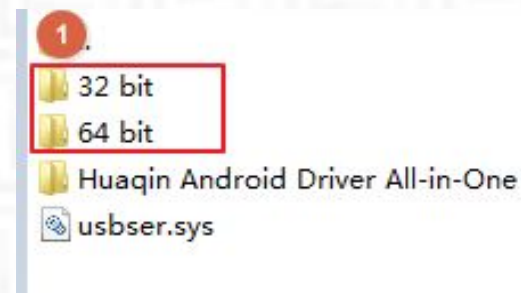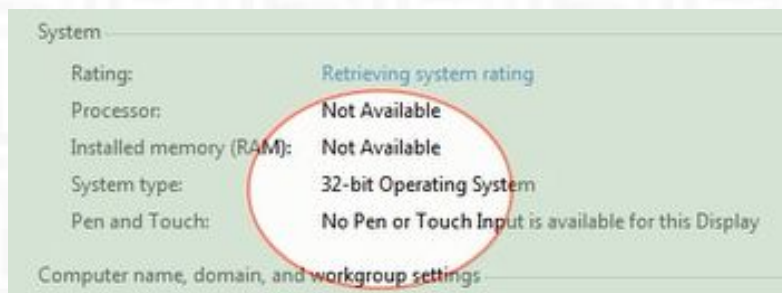

Preparation: Driver Installation

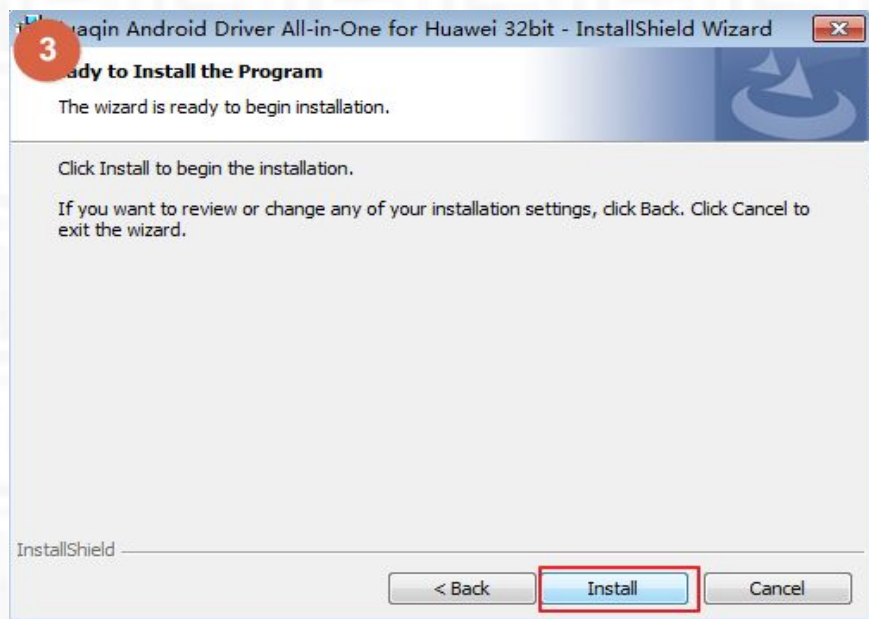


The first installation will show the following dialog box, please click "Install this driver software anyway", which will popup many times.



Preparation: Driver Installation

After the installation completed, restart the computer to make the drivers take effect.

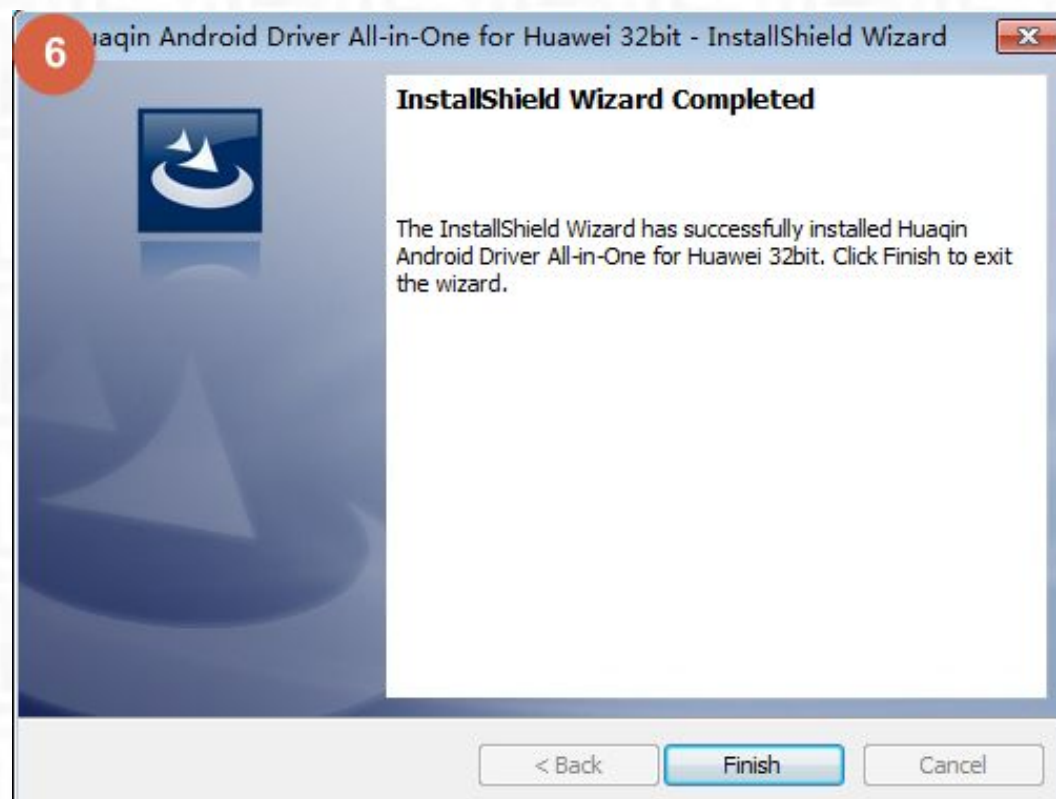

Software Flashing SOP

Unzip the compression package: **hq_AL817_customdownload_V1.2_160120_Specialimg.**


According to the following order installation:

1. Run **MultiPortDownload.exe.**
2. Click **OK;**




Software Flashing SOP

3. Click **Select File**, select the scatter file in user software.

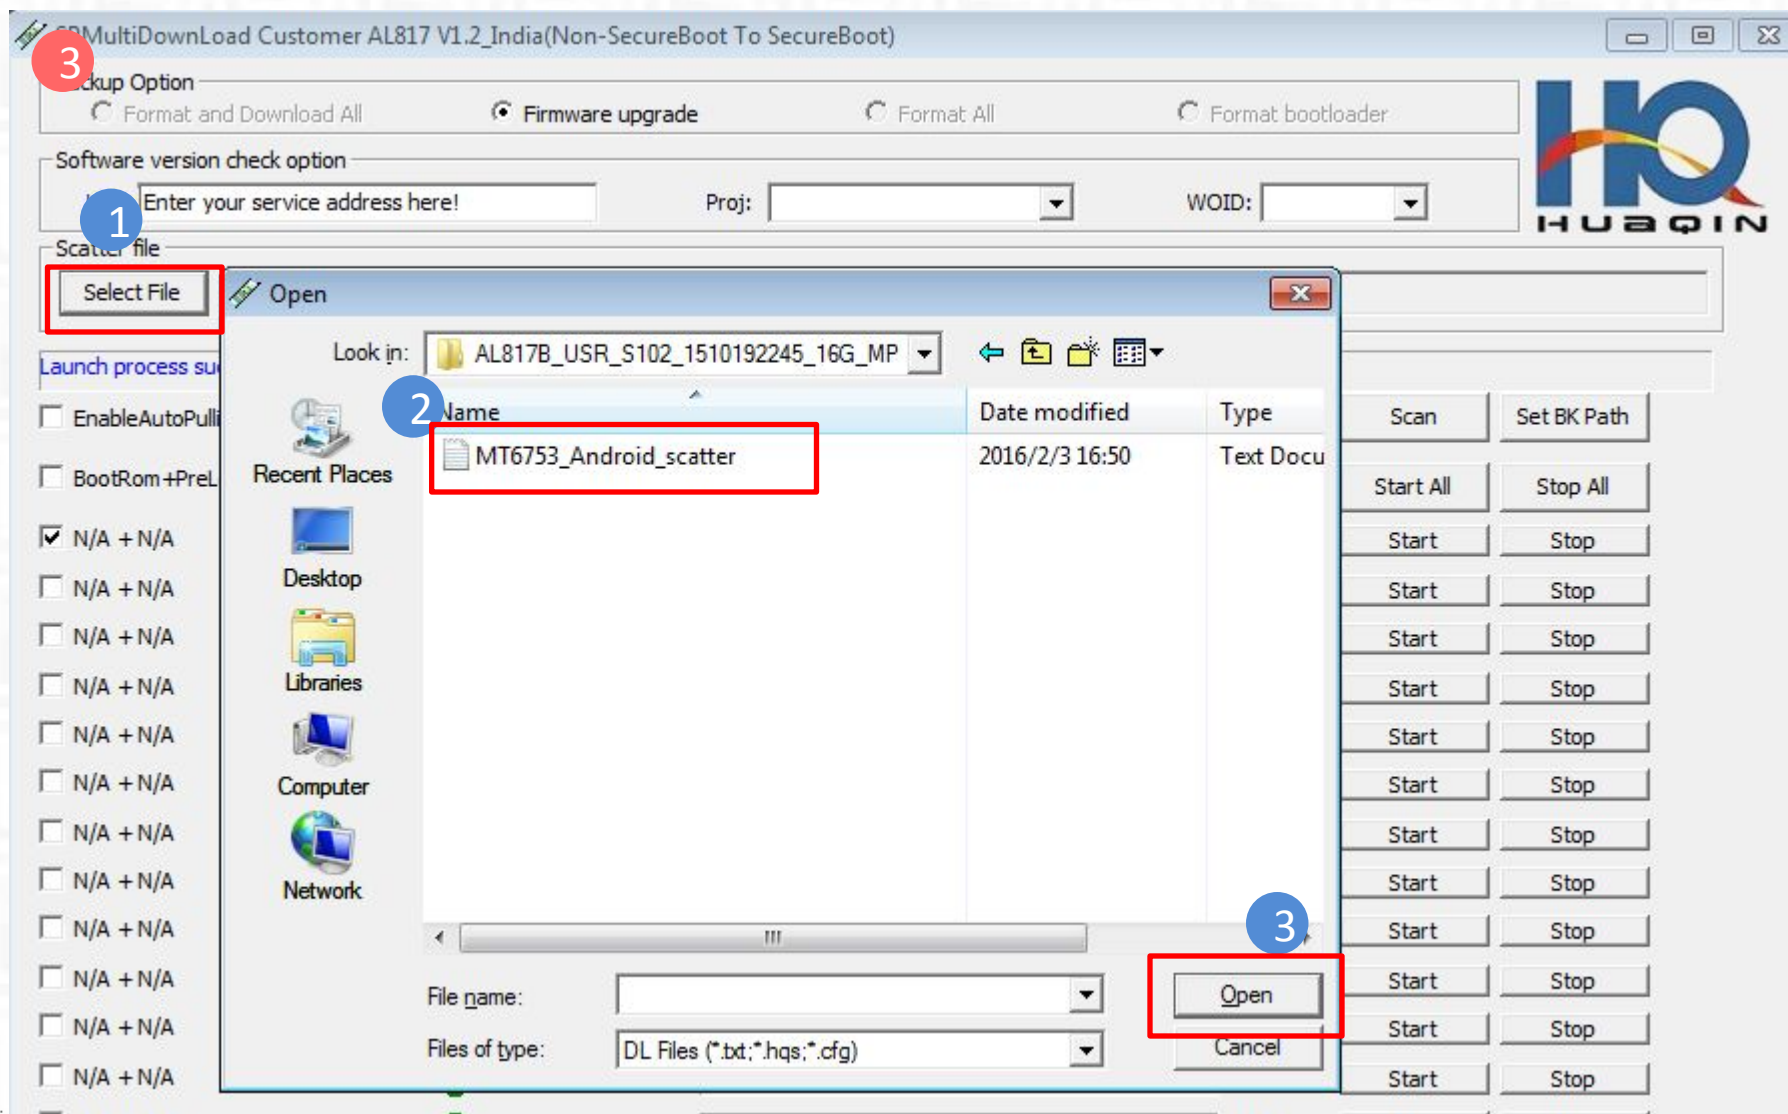


Software Flashing SOP

4. Scan ports:
 1. Click “Scan” ;
 2. Keep holding down the device **volume -** , then connect device and computer until scanning success(about 5s).

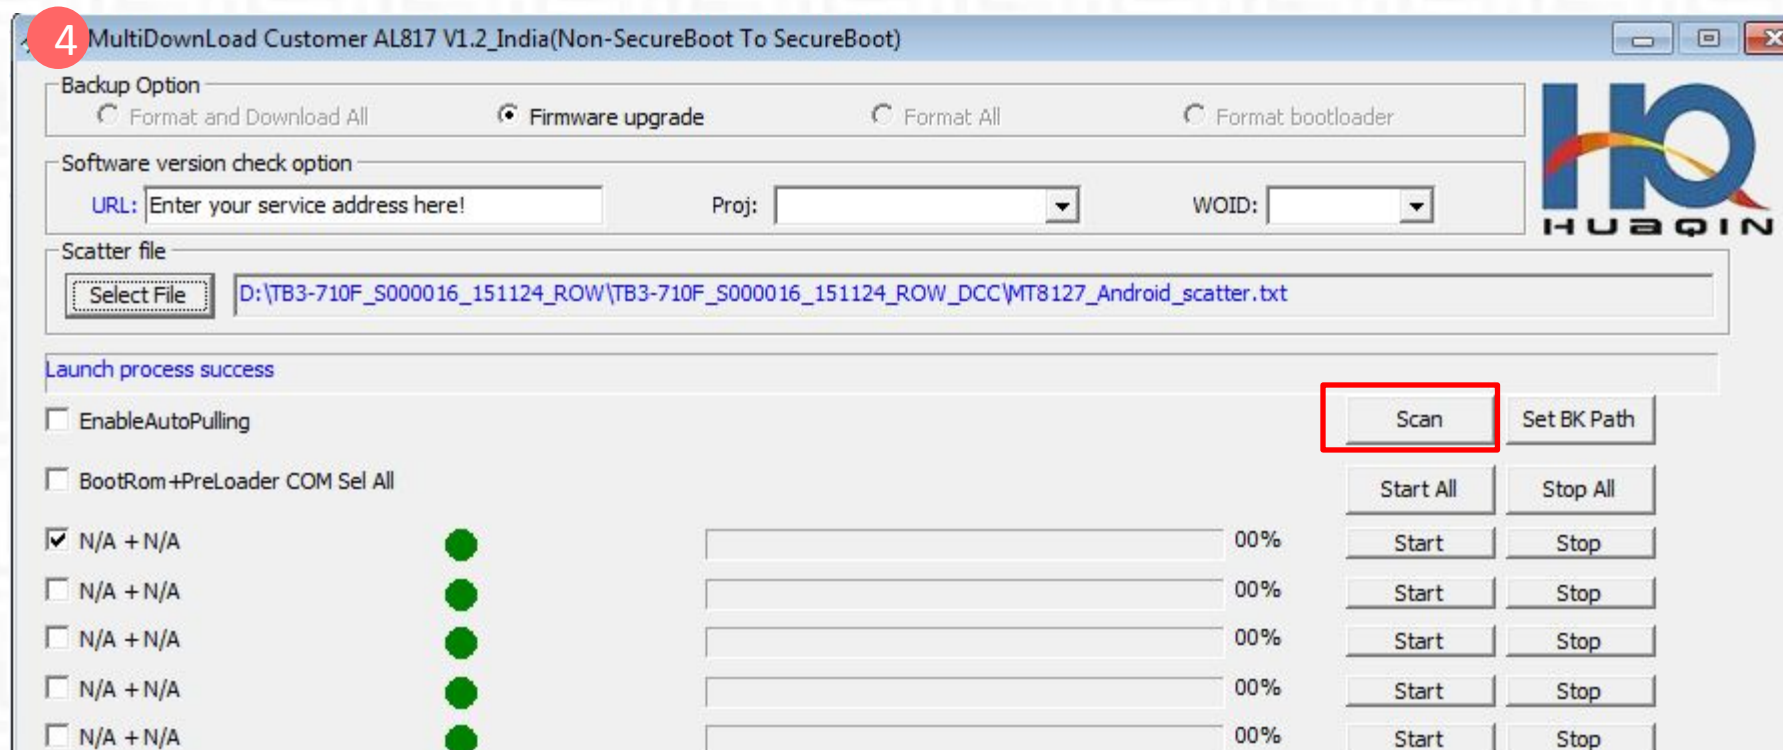


Software Flashing SOP

5. When the port scans success, click “Stop All”.

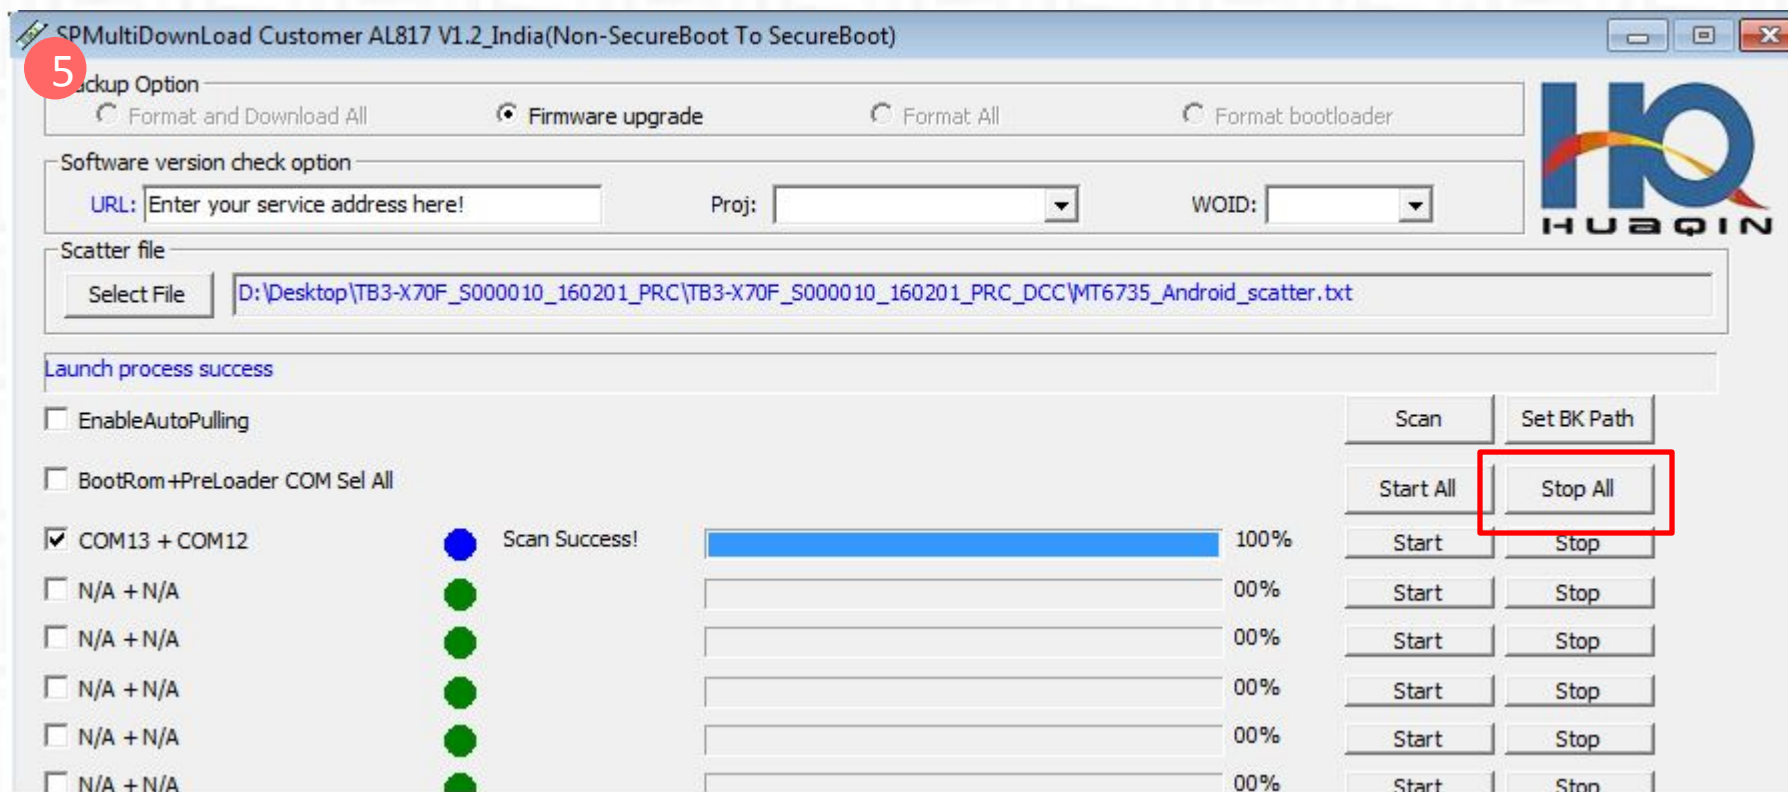

Software Flashing SOP

6. Then click “Start”.

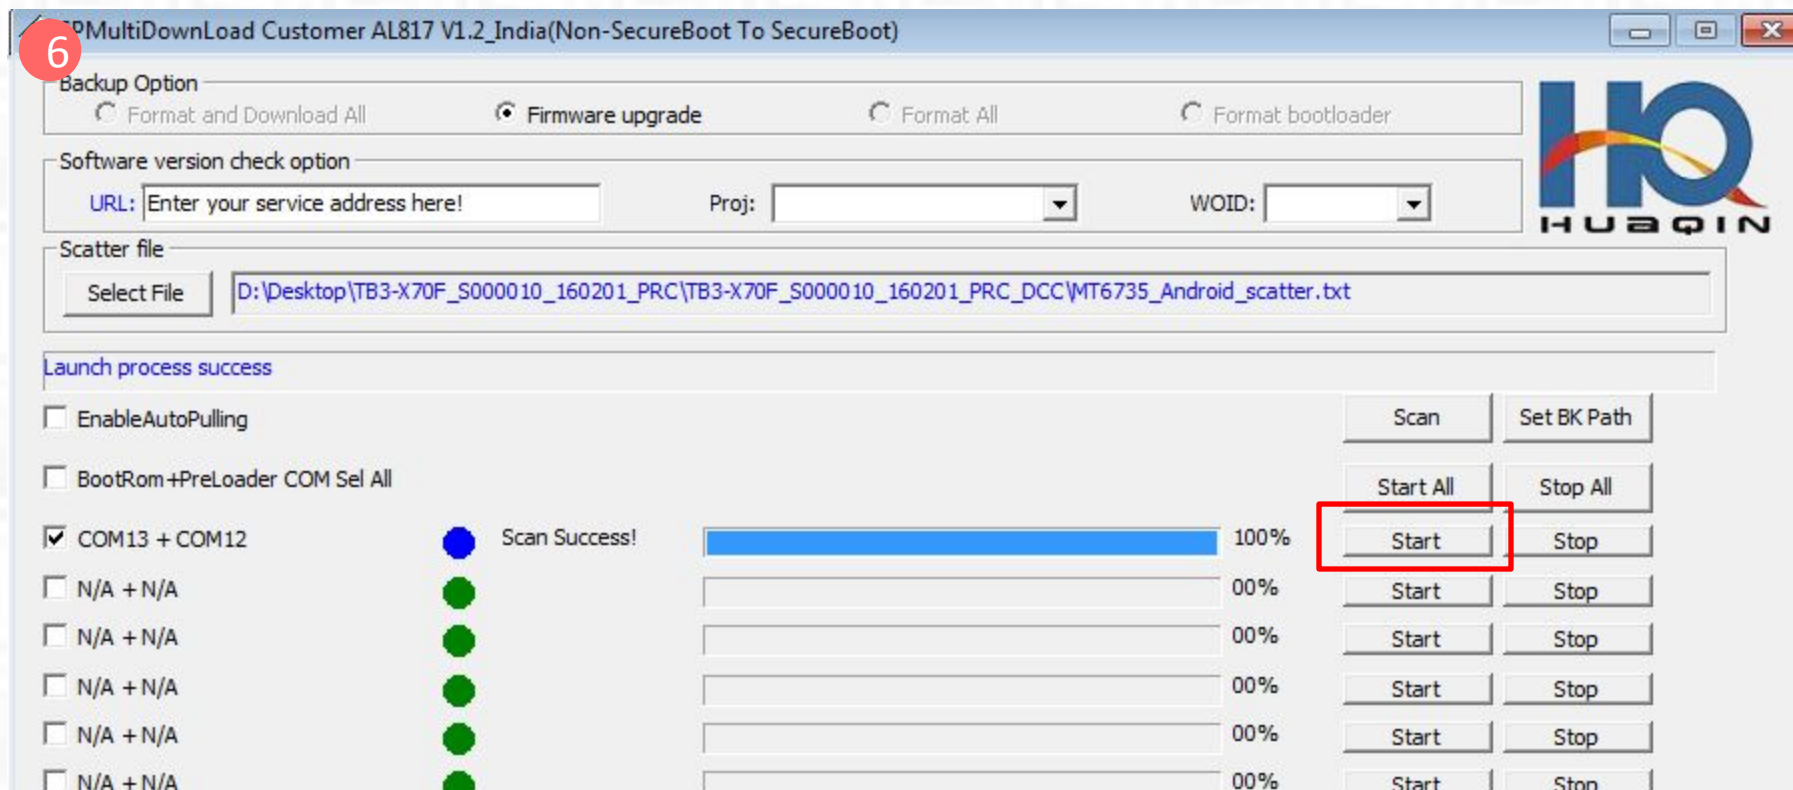

Software Flashing SOP

10 Up Option

Format and Download All Firmware upgrade Format All Format bootloader

Software version check option

URL: Proj: WOID:

Scatter file

Select File

Format EMMC flash: begin_addr(0x00000000C4000000), length(0x0000000682B80000). Auto Polling number:0

EnableAutoPulling

BootRom+PreLoader COM Sel All

COM 4 + COM 3 ● DL 15%

N/A + N/A ● 00%

N/A + N/A ● 00%

Buttons: Scan, Set BK Path, Start All, Stop All, Start, Stop

Wait until the progress bar is completed. Keep connecting the cable during this time.

When the progress bar is completed, disconnect USB cable, restart the device.



THANK YOU

DAKUJEM DANK BEDANKT MERCI תודה TAKK 谢谢
ありがとう СПАСИБО GRACIAS DZIĘKUJĘ DANKE
OBRIGADO БЛАГОДАРЯ GRAZIE धन्यवाद GRACIAS

